

Instructions for using LED strobe lights

Precautions

After entering the screensaver state, press and hold the menu button for about 2-3 seconds to turn on the screen.

1. Comparison table of English color screen display window functions.

Main menu	Secondary Menu	Third level menu	Default value
DMX	add	add 001	001
	CH	15CH/158CH/50CH	15CH
	Signal status	clear/keep	clear
root	PassWord	- - - -	↑↓↑↓
	R current	020--255	235
	G current	020--255	235
	B current	020--255	235
	W current	020--255	235
	temperature	40--80	65
	power	050--255	200
	push	是/否	否
Photoeffect	manual dimming	R:000-255	R:255
		G:000-255	G:255
		B:000-255	B:255
		W:000-255	W:255
		Dimming :000-255	Dimming :255
		Dimming Fine:000-255	Dimming Fine:000
	macro	Strobe :000-255	Strobe :000 The strobe segments refer to the channel table
		mode 1-63	1
		speed 0-100%	50%
		RGB dimming 0-100%	100%
setting	Master	ON/OFF	ON
	Slave	ON/OFF	ON
	Dim modes	Standard	Standard
		Stage	
		TV	
		Architect	
		Theatre	
		Stage 2	
	Dim curves	Line	Line
		Square	
		Inverse	
		S line	
	EN	EN/中文	EN
	screen saver	ON/OFF	ON
	LOCK	ON/OFF	ON PassWord: MENU-UP-DOWN-ENTER

	Rotation	NO/YES	NO
	Fans mode	Controll /longTurn	Controll Note: In the case of temperature control short circuit or open circuit, the fan is only controlled by the light, that is, the light fan starts, and the fan stops after 20 seconds after turning off the light; Temperature control Under normal conditions, the temperature shows that the fan starts above 45 degrees,the temperature shows that the fan stops at a low 40 degrees.
	Topic	1/2/3	1
	Restore	NO/YES	NO
Information (Main interface)	temperature	XX°C/XXX°F	
	DMX	RGBW Dimming	
		RGBW Strobe	
		DMX add	
		CH	
		Signal	
	RDM UID		
	version	RLS240122Q4 V1	

2. DMX512 15 Channel Description

Serial Number	channel value	function	illustrate	
Channel 1	000-255	R dimming	R dimming, linear dimming, from dark to bright	
Channel 2	000-255	G dimming	G dimming, linear dimming, from dark to bright	
Channel 3	000-255	B dimming	B dimming, linear dimming, from dark to bright	
Channel 4	000-255	W dimming	W dimming, linear dimming, from dark to bright	
Channel 5	000-255	RGB total dimming	RGB total dimming, linear dimming, from dark to bright	
Channel 6	000-255	RGB Fine tune	RGB Fine tune, linear dimming, from dark to bright	
Channel 7	000-255	W total dimming	W total dimming, linear dimming, from dark to bright	
Channel 8	000-255	W Fine tune	W Fine tune, linear dimming, from dark to bright	
Channel 9	000-255	RGB strobe	0-5	LED ON
			6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
			0-5	LED ON

Channel 10	000-255	W strobe	6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
Channel 11	000-255	RGBW Macro Function Selection	0-5	Empty
			6-9	Effect 1
			10-13	Effect 2
			14-17	Effect 3
			18-21	Effect 4
			22-25	Effect 5
			26-29	Effect 6
			...	
			246-249	Effect 61
			250-253	Effect 62
			254-255	Effect polling
Channel 12	000-255	RGB function speed	Function speed, from slow to fast	
Channel 13	000-255	Gradient speed	Gradient speed, from slow to fast	
Channel 14	000-255	Dimming mode	0-20	Standard
			21-40	Stage
			41-60	TV
			61-80	Architect
			81-100	Theatre
			101-120	Stage 2
			121-255	Default value (screen value)
Channel 15	000-255	Dimming curves	0-20	Line
			21-40	Square
			41-60	Inverse
			61-80	S line
			81-255	No function (screen value)

3. DMX512 158 Channel Description

Serial Number	channel value	function	illustrate
Channel 1	000-255	R1 dimming	R1 dimming, linear dimming, from dark to bright
Channel 2	000-255	G1 dimming	G1 dimming, linear dimming, from dark to bright
Channel 3	000-255	B1 dimming	B1 dimming, linear dimming, from dark to bright
.....
Channel 118	000-255	R40 dimming	R40 dimming, linear dimming, from dark to bright
Channel 119	000-255	G40 dimming	G40 dimming, linear dimming, from dark to bright
Channel 120	000-255	B40 dimming	B40 dimming, linear dimming, from dark to bright
Channel 121	000-255	W1 Dimming	W1 dimming, linear dimming, from dark to bright
Channel 122	000-255	W2 Dimming	W2 dimming, linear dimming, from dark to bright

Channel 123	000-255	W3 Dimming	W3 dimming, linear dimming, from dark to bright	
.....	
Channel 150	000-255	W30 Dimming	W30 dimming, linear dimming, from dark to bright	
Channel 151	000-255	RGB total dimming	RGB total dimming, linear dimming, from dark to bright	
Channel 152	000-255	RGB Fine tune	RGB Fine tune, linear dimming, from dark to bright	
Channel 153	000-255	W total dimming	W total dimming, linear dimming, from dark to bright	
Channel 154	000-255	W Fine tune	W Fine tune, linear dimming, from dark to bright	
Channel 155	000-255	RGB strobe	0-5	LED ON
			6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
Channel 156	000-255	W strobe	0-5	LED ON
			6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
Channel 157	000-255	Dimming mode	0-20	Standard
			21-40	Stage
			41-60	TV
			61-80	Architect
			81-100	Theatre
			101-120	Stage 2
			121-255	Default value (screen value)
Channel 158	000-255	Dimming curves	0-20	Line
			21-40	Square
			41-60	Inverse
			61-80	S line
			81-255	No function (screen value)

4. DMX512 50 Channel Description

Serial Number	channel value	function	illustrate
Channel 1	000-255	R1-R10 dimming	R1-R10 dimming, linear dimming, from dark to bright
Channel 2	000-255	G1- G10 Dimming	G1- G10 dimming, linear dimming, from dark to bright
Channel 3	000-255	B1- B10 Dimming	B1- B10 dimming, linear dimming, from dark to bright
.....

Channel 10	000-255	R30-R40 dimming	R30-R40 dimming, linear dimming, from dark to bright	
Channel 11	000-255	G30- G40 Dimming	G30-G40 dimming, linear dimming, from dark to bright	
Channel 12	000-255	B30- B40 Dimming	B30- B40 dimming, linear dimming, from dark to bright	
Channel 13	000-255	W1 Dimming	W1 dimming, linear dimming, from dark to bright	
Channel 14	000-255	W2 Dimming	W2 dimming, linear dimming, from dark to bright	
Channel 15	000-255	W3 Dimming	W3 dimming, linear dimming, from dark to bright	
.....	
Channel 42	000-255	W30 Dimming	W30 dimming, linear dimming, from dark to bright	
Channel 43	000-255	RGB strobe	0-5	LED ON
			6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
Channel 44	000-255	W strobe	0-5	LED ON
			6-31	LED OFF
			32-63	LED ON
			64-95	Ordinary strobe
			96-127	LED ON
			128-159	Slow light strobe
			160-191	LED ON
			192-223	Random strobe
			224-255	LED ON
Channel 45	000-255	RGB total dimming	RGB total dimming, linear dimming, from dark to bright	
Channel 46	000-255	RGB Fine tune	RGB Fine tune, linear dimming, from dark to bright	
Channel 47	000-255	W total dimming	W total dimming, linear dimming, from dark to bright	
Channel 48	000-255	W Fine tune	W Fine tune, linear dimming, from dark to bright	
Channel 49	000-255	Dimming mode	0-20	Standard
			21-40	Stage
			41-60	TV
			61-80	Architect
			81-100	Theatre
			101-120	Stage 2
			121-255	Default value (screen value)
Channel 50	000-255	Dimming curves	0-20	Line
			21-40	Square
			41-60	Inverse
			61-80	S line
			81-255	No function (screen value)