

Thank you for having chosen our company's fog machine. For your own safety, please read this user manual carefully before installing the device.

When receiving the machine, open the package and check carefully whether the machine is damaged or the accessories are lost, if any problems, please contact the supplier.

Accessories

Name	Quantity
Smoke machine	1piece
Power cord	1 piece
Manual	1 piece
Remote controller	1piece

Technical Parameter

Power: 3000W

Voltage: AC 220V 50Hz

Warm-up time: 3 minutes

Capacity of tank : 5 liters

Fluid consumption(100% output): 30000Cuft/min

Control mode : LCD/DMX512/ remote control

Smoke distance: 6 meters

Weight:12.25kgs

G.W:13.2kgs

Size : 39*31.5*26 cm

Packing size: 43*38*31cm

Guidance:

1. This product can be installed on high hanger, or placed on the ground. There

are three spraying smoke directions: upward,downward,sideward.

2. Keep the fog machine flat,do not tilt or flip. Before connecting this unit to the mains power supply, you must add the fluid tank with high quality fog fluid and check that the nozzle is clean and unobstructed.

3. Before connect to power, you should check whether the voltage you use is suitable for the fog machine or not.

4. Power cord should be plugged into a grounded electrical outlet,put the switch to "ON", then fog machine start warming up, can spray fog after warming up is completely.

5. Connect the controllers with the fog machine, then you can control the fog machine by the controllers.



LCD Operation:

After power on the device and turn on switch, LCD shows machine's temperature and preheating, when the temperature up to 320°C,preheating completely,ready to spray smoking.

There are four button on the right of LCD:

FUNCTION:Menu choice or return the main interface button

▲ : Plus/ON/OFF button

▼ : Minus/ON/OFF button

STOP: Confirm and Enter button

There are three options on the display:

Setting option:

Press FUNCTION button to choose Setting and press STOP button enter into the Setting option.

DMX Address:

001 - 512 adjustable, ▲ ▼ to plus and minus, STOP to enter.

Spray Time(s):

0 - 20 (s) adjustable, ▲ ▼ to plus and minus, STOP to enter.

Wifi Switch:

wireless remote control: ON/OFF

Language: Chinese/English

Screen Rotation: OFF/ON, Just for seeing if device hung on the trusses

Load Default: Restore factory settings, no operating this option.

Man(Manual) option:

1. Volume(%): 0 - 100, adjustable
2. Spray: OFF/ON, manual spray smoke
3. Interval Time(s): 0-30s, adjustable
4. Duration(s): 0-10s, adjustable
5. Timing Switch: ON/OFF, based on Interval and Duration.

Info option: Ignore, no operation, just the information of PCB.

DIS: version of LCD

MT: version of Motor

Man: manual page, based on channel manual to control

Tim: record time

System Error: On the left of Display, Red indicator light on, that is in problem, ERR light on;

Remote control:

A button: ON switch to spray smoke;

B button: OFF switch to stop smoke.

DMX Channel:

Only have 1 channel.

CH1: smoke volume: 0-100%, adjustable.

3000W DMX FOG MACHINE MANUAL



Please read this manual carefully before using