

Thank you for having chosen our company's Haze Machine. For your own safety, please read this user manual carefully before installing the device.

When receiving the machine, open the package and check carefully whether the machine is damaged or the accessories are lost, if any problems, please contact the supplier.

Accessories

Name	Quantity
Smoke machine	1piece
Power cord	1 piece
Manual	1 piece
Remote controller	1piece

Technical Parameter

Power: 2000W

Voltage: AC 220V 50Hz

Warm-up time: 20 seconds

Capacity of tank : 5 liters

Liquid consumption : 200min//L(30%) 120Min/L(100%)

DMX channels : 2 channel

3/5-pin DMX input /output

Control mode : LCD/DMX512/ remote control

Weight:16.75kgs

G.W:17.5kgs

Size : 52*26*41 cm

Packing size: 56*30*43.5 cm

outine Maintenance and common faults

Periodically clean your machine to reduce replacement parts and repair expenses.


1. The poor fog liquid can cause blockage, it is recommended to use high quality fog liquid.

2. The machine might be blocked due to high concentration fluid, not clean fluid or overheat, so regular care and maintenance can ensure long-term use. After about 40 hours continually use, please use 80% distilled water and 20% white vinegar to remove the accumulated impurities inside the heat pipe , as following:

1) washing the pipe in the tank and the filter head.

2) Pour out the fog liquid , replacing the cleaning liquid (80% distilled water and 20% white vinegar), turn on the power , keep it operating till the cleaning liquid runs out.

3. If the fog turns less, and the pump makes noise, or can not spray fog, you should turn off the power immediately and at the same time check the fluid tank, fuse and power plug. If all of these are normal, please connect the power with the plug and try again.

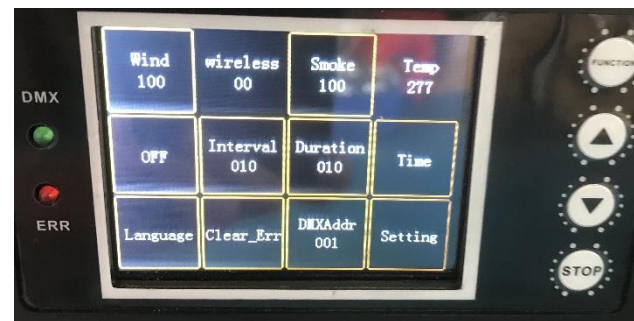

Touch screen LCD display:

There is no independent Power switch on the machine. After connect the device with blue powerCON cable, then turn right the blue powerCON that will be in startup status and preheating. LCD shows 12 functions' option. You can choose option to adjust what you want.

There are four button on the right of LCD:

FUNCTION: Menu choice or return the main interface button

▲ : Plus/ON/OFF button

▼ : Minus/ON/OFF button

STOP: Confirm and Enter button

Main Menu Interface:

Wind: 0-100, setting up wind volume,adjustable.

Wireless: 00:no remote operate,01: match code correctly.

Smoke: 0-100,setting up smoke volume,adjustable.

Temp: shows machine's temperature.220-280°C. Up to 270°C can spray smoking,220°C will stop to work.

OFF/ON: Stop working/Smoking, based on the functions of Smoke and Wind.

Interval:0-600s adjustable.Set the time to stop smoking at fixed time.

Duration:0-600s adjustable.duration of timed and quantitative smoke spraying.

Time: the Switch of timed and quantitative.

Language: Chinese/English

Clear_Err: Clear system error.

DMXAddr:001-512,adjustable.

Setting:

Wifi Switch: ON/OFF, Switch of wireless remote control.

Volume Switch:ON/OFF, Switch of spraying smoke

System Error: Record of Error.

Remote control:

A button: ON switch to spray smoke;

B button: OFF switch to stop smoke.

DMX Channel:

CH1: wind volume:0-100%,adjustable.

CH2: smoke volume:0-100%,adjustable.

Note:

Match code:

press A button of remote control,flash indicator,then match code correctly,and Wireless option on LCD shows 01.

Indicator:

Green light on means DMX connect correctly.Green light off,no dmx signal.

Red light on mean there is a problem, no liquid no working.

2000W MORNING HAZE MACHINE MANUAL



Please read this manual carefully before using